

DNTV Live! Keyboard Shortcuts

	Key Name	Function	Keyboard Shortcuts
1-1	TV	Launch/Exit DNTV Live!/TV Mode	CTRL X
1-2	PC	Shut down the PC	Shift P
2-1	REW	Backward	CTRL ALT D
2-2	PLAY	Play	CTRL P
2-3	FWD	Forward	CTRL ALT F
2-4	STOP	Stop	CTRL S
3-1	REPLAY	GOTO Previous Chapter or file	CTRL D
3-2	PAUSE	Pause	CTRL E
3-3	SKIP	GOTO Next Chapter or file	CTRL U
3-4	RECORD	Start/Stop Recording	CTRL R
4-1	BACK	Configuration	CTRL O
4-2	UP	Key Up	Key Up
4-3	MORE	Channel List	Shift C
5-1	LEFT	Key Left	Key Left
5-2	OK	Enter	Enter
5-3	RIGHT	Key Right	Key Right
6-1	ASPECT	Original Aspect Ratio	CTRL ALT V
6-2	DOWN	Key Down	Key Down
6-3	MSN	DNTV Scheduler Pro	CTRL W
7-1	Videos	Open Media File	CTRL F
7-2	Music	Enter Music Mode	CTRL J
7-3	Pictures	Scheduler	CTRL B
7-4	My TV	TV Mode	CTRL H
8-1	Vol+	Volume Up	CTRL ALT U
8-2	Start	Root Menu	CTRL F10
8-3	Ch+	Channel Up	CTRL U
9-1	Vol-	Volume Down	CTRL ALT X
9-2	Mute	Mute	CTRL ALT Y
9-3	Ch-	Channel Down	CTRL D
10-1	1	1	1
10-2	2	2	2
10-3	3	3	3
11-1	4	4	4
11-2	5	5	5

11-3	6	6	6
12-1	7	7	7
12-2	8	8	8
12-3	9	9	9
13-1	*	Show/Hide OSD	CTRL ALT O
13-2	0	0	0
13-3	#	Show/Hide Control Panel	CTRL ALT W
14-1	Guide	EPG	CTRL A
14-2	RTV	Silent Record	CTRL F8
14-3	Help	Inbuilt Manual	F1
14-4	PIP	Show/Hide PIP	CTRL ALT I
15-1	Radio	Radio Mode	CTRL K
15-2	DVD	DVD Mode	Shift D
15-3	Audio	Audio Properties	F3
15-4	Title	Closed Captions	Shift S